
CONTEMPRA/IME-SERIES

ASSEMBLY INSTRUCTIONS FOR **CONTEMPRA & IME PLINTH**

BUL10086 REV. A

PAGE 1 OF 1

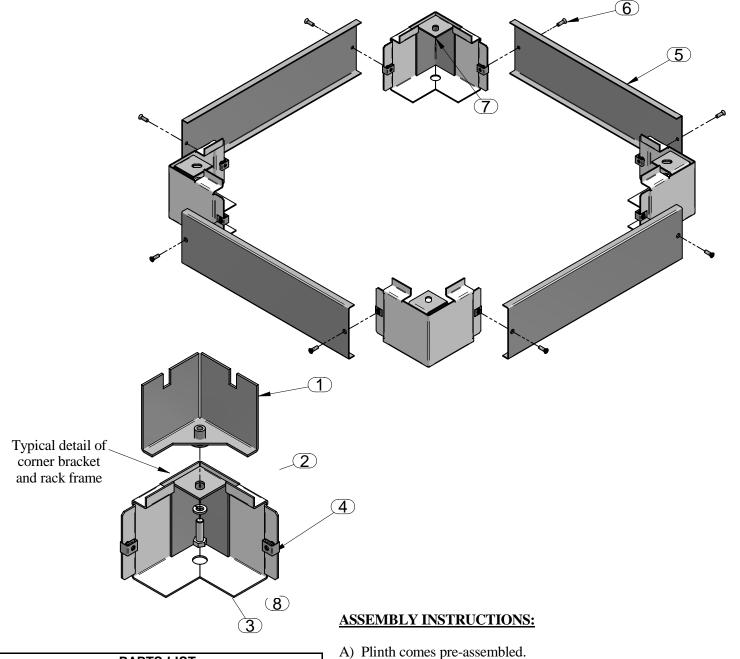

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	BOTTOM CORNER OF CABINET	4
2	CORNER SUPPORT	4
3	5/16 HEX HD SCREW	4
4	10-32 CLIP NUT	8
5	REMOVABLE PANEL	4
6	10-32 PHILLIPS HD SCREW	8
7	INNER SUPPORT PLINTH	4
8	5/16 LOCK WASHER	4

TOOL BOX



- B) Lay rack frame (item 1) on side.
- C) Fasten plinth to base of rack using 5/16 bolt (item 3) and lock washer (item 8) thru hole in inner support (item 7) and into weldnut on bottom of cabinet (item 1) typical 4 corners.
- D) Removable panels (item 5) can be taken off by removing 10-32 screws (item 6)



visit our website @ www.hammondmfg.com