

# Skywire™ LTE CAT-M1 Embedded Cellular Modem Datasheet

NimbeLink Corp

**Updated: March 2017** 



@ NimbeLink Corp. 2017. All rights reserved.

NimbeLink Corp. provides this documentation in support of its products for the internal use of its current and prospective customers. The publication of this document does not create any other right or license in any party to use any content contained in or referred to in this document and any modification or redistribution of this document is not permitted.

While efforts are made to ensure accuracy, typographical and other errors may exist in this document. NimbeLink reserves the right to modify or discontinue its products and to modify this and any other product documentation at any time.

All NimbeLink products are sold subject to its published Terms and Conditions, subject to any separate terms agreed with its customers. No warranty of any type is extended by publication of this documentation, including, but not limited to, implied warranties of merchantability, fitness for a particular purpose and non-infringement.

Skywire and NimbeLink are trademarks of NimbeLink Corp. All other trademarks appearing in the document are the property of their respective owners.

## **Table of Contents**

```
Table of Contents
Introduction
   Orderable Part Numbers
   Product Overview
   Block Diagram
Technical Specifications
   Electrical Specifications
      Absolute Maximum Ratings
      Recommended Ratings & Module Pin out
      Connectors J1 and J2
      Connectors J3, X1, X2
   Mechanical Specifications
      Mechanical Characteristics
      Mating Connectors
      Device Placement
   Environmental Specifications
Important Design Considerations
   PWR ON Signal
   Power Supply Requirements
   Serial Communications
   LED
   GPIO Control
Mounting Guidelines
   Board to Board connectors approach
   Solder to Board connection approach
Antenna Considerations
   Primary Antenna Requirements
   Recommended Antennas
Certifications
   Carrier Specific
```

Geography Specific

Federal Regulatory Licensing

End Product Labeling Requirements

# 1. Introduction


#### 1.1 Orderable Part Numbers

Orderable Device	Firmware Revision	Operating Temp	Bands	GPS/GNSS	Network Type
NL-SW-LTE-SVZM20	TBD	-40 to +85°C	B4, B13	No	Verizon
NL-SW-LTE-SVZM21	TBD	-40 to +85°C	B4, B13	Yes	Verizon

#### 1.2 Product Overview

Add robust cellular connectivity to your M2M devices with scalable radio technology with Skywire line of modems including CAT-M1 based LTE solutions. Extensive experience in designing and building embedded product solutions makes the NimbeLink Skywire™ embedded cellular modem the smallest on the market. It complies with the popular XBEE interface standard and supports multiple LTE bands minimizing costs of hardware and network access. The module is designed for volume production and is intended for OEMs to embed into end equipment designs.

# 1.3 Block Diagram

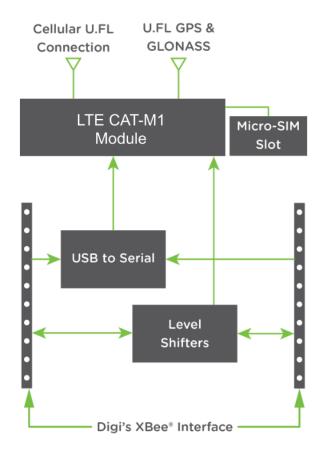

# 2. Technical Specifications

# 2.1 Electrical Specifications

#### 2.1.1 Absolute Maximum Ratings

Parameter	Signal	Maximum Rating
Main Power Supply	VCC	5.1V
I/O Voltage Reference	VREF	5.5V

### 2.1.2 Recommended Ratings & Module Pin out

#### 2.1.2.1 Connectors J1 and J2

Pin	Name	Direction	Description	Min	Typical	Max	If not used
1	VCC	Input	Main Power supply	3.1V	3.8V	4.5V	Must be implemented
2	DOUT	Output	UART data out, I/O level tied to VREF GND to 0.67		VOH: VREF x 0.67 to VREF	Must be implemented	
3	DIN	Input	UART data in, I/O level tied to VREF	VIL: GND to 0.15V		VIH: VREF-0.4V to VREF	Must be implemented
4	GND	Input	Ground Pin		0		Must be implemented
5	RESET_N	Input	Controls RESET_N input on modem, tie low for a minimum of 1uS and released to activate. Internally pulled up to VCC. Drive with open collector output. Assert only in an emergency as the module will not gracefully exit the cellular network when asserted.		VREF		No connection
6	VUSB	Input	Supply for USB interface	4.5V	5V	5.5V	No connection
7	USB_D+	I/O	USB differential Data + signal				No connection
8	USB_D-	1/0	USB differential Data - signal				No connection
9	WAKE	Input	Wakes up the modem from low power modes. Default configuration for wakeup is a low to high transition on this line	VIL: GND to 0.15V			Tie to GND
10	GND	Input	Ground Pin 0			Must be implemented	
11	GND	Input	Ground Pin 0			Must be implemented	
12	СТЅ	Output	Modem Clear to Send hardware flow control output	VOL: GND to 0.55V		VOH: VREF x 0.67 to VREF	No connection

13	ON_STAT US	Output	Signal drives high indicating the modem is on and ready for commands. (It can be idle, or in sleep mode)	0		1.8V	No connection
14	VREF	Input	Voltage reference for off board I/O signals. This signal drives the input voltage side of an onboard buffer which converts all external I/O voltage from VREF range to 1.8V range to drive the onboard modem module.	1.65V	1.8V or 3.3V	5.5V	Must be implemented
15	GND	Input	Ground Pin		0		Must be implemented
16	RTS	Input	Modem Request to Send hardware flow control input	VIL: GND to 0.15V		VIH: VREF-0.4V to VREF	Tie to GND
17	GPS_RX	Input	UART GPS data in, I/O level tied to VREF	VIL: GND to 0.15V		VIH: VREF-0.4V to VREF	Must be implemented
18	GPS_TX	Output	utput UART GPS data out, I/O level tied to VREF			VOH: VREF x 0.67 to VREF	Must be implemented
19	19 RING Output when there is incoming traffic on the GNE		VOL: GND to 0.55V		VOH: VREF x 0.67 to VREF	Must be implemented	
20	ON_OFF	Input	Modem PWR_ON is active low Internally pulled up to internal I/O rail with resistor. Do not use any external pull ups. <b>Note</b> : If you want modem to turn on automatically when power is applied, permanently tie this signal to GND.	0		1.8V	Must be implemented.

2.1.2.2 Connectors J3, X1, X2

Connector Designator	Description	Connector Location
J3	Micro SIM Connector	Bottom Side of Module
X1	Primary Antenna Connection	Topside of Module
X2	GPS/GNSS Antenna Connection	Topside of Module

# 2.2 Mechanical Specifications

#### 2.2.1 Mechanical Characteristics

Parameter	Typical	Unit
Dimensions (excluding pin height, for solder to board applications)	29.0 x 33.60 x 6.63	mm
Dimensions (including pin height, for board to board connector		
applications)	29.0 x 33.60 x 10.73	mm
Weight	0.3	OZ
Connector Insertion/Removal	hundreds	Cycles

#### 2.2.2 Mating Connectors

Connector	Manufact	Populated on	Recommended	
Designator	ure	Module	Mate	Mate Manufacture
		951110-2530-AR-		
J1, J2	3M	PR	950510-6102-AR	3M
			Acceptable	
			alternate:	Sullins Connector
			NPPN101BFCN-RC	Solutions
J3	Molex	786463001	Micro SIM Card	Micro SIM Card
X1, X2	Hirose	U.FL-R-SMT(10)	CAB.011	Taoglas

#### 2.2.3 Device Placement

Make sure the Skywire™ is installed in the correct orientation; failure to do so will damage the device and void the warranty.

## 2.3 Environmental Specifications

Parameter	Min	Typical	Max	Unit	Note
Operating Temperature	-30	25	+60	°C	
Extended Temperature*	-40	25	+85	°C	
Operating Humidity	20		90	%	Non-condensing

<sup>\*</sup> Transmit power limited during Extended Temperature operation

# 3. Important Design Considerations

# 3.1 PWR\_ON Signal

To conserve power, the Skywire modem does not automatically start up when power is applied. The baseboard design must supply a means to assert the PWR\_ON signal low. The signal is level sensitive. After asserting the PWR\_ON signal, software must wait for device to boot up before attempting to communicate with the Skywire Modem. To make module automatically start when power is applied, tie PWR\_ON signal to GND permanently.

## 3.2 Power Supply Requirements

The module will regularly consume high amounts of current on the Main Power Supply (VCC), up to 500mA during active transmits and receives. The baseboard power supply should be designed to support peak currents up to 1 Amp. A 100uF capacitor should be placed near the VCC pin on the module to ensure ample energy is available, with a low inductance path to the VCC pin. For example power supply designs, there are multiple references available. See the NimbeLink Skywire™Development Kit schematic for a switching regulator example.

#### 3.3 Serial Communications

The Skywire Modem can communicate over UART for AT commands and PPP interface. The USB interface is only provided as a path for firmware update and is not available for issuing AT commands. There is a second UART available for communication with GPS/GNSS.

### 3.4 LED

**TBD** 

#### 3.5 GPIO Control

**TBD** 

# 4. Mounting Guidelines

The Skywire<sup>™</sup> embedded cellular modem supports multiple connection methods, the two primary methods are board to board connectors and soldering directly to the baseboard.

## **4.1** Board to Board connectors approach


The XBEE form factor calls for two, 10 pin, 2mm pitch female receptacles.


There are many connector manufacturers that can be used; below is one readily available product:


Manufacturer: 3M Alternate: Sullins Connector Solutions


Part Number: 950510-6102-AR Alternate P/N: NPPN101BFCN-RC

Typical part drawing and footprint information:

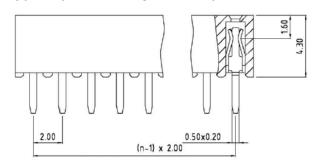




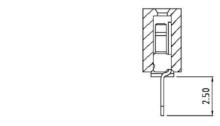



## 4.2 Solder to Board connection approach

The module can be soldered directly to a PCB. The PCB should be designed with two rows of ten, 0.8mm plated thru holes spaced 2mm apart. The two rows should be 22mm apart. See drawing for recommended footprint. Measurements are in millimeters. U.FL locations are marked with circles, X1 and X2 on top side of board, J3 is Micro SIM card slot on bottom side of board.

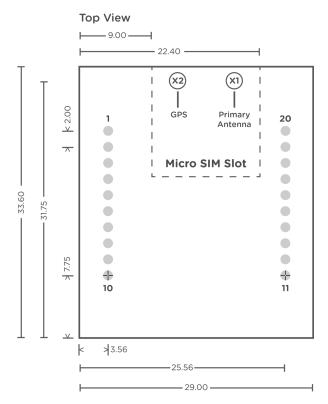

# 5. Antenna Considerations

## **5.1 Primary Antenna Requirements**

Designers should review latest VZM20Q Hardware User Guide to ensure the information is up to date.

PRIMARY ANTENNA REQUIREMENTS					
Frequency Range	Depending on the frequency bands provided by the network operator, the customer shall use the most suitable antenna for those bands				
Bandwidth	LTE B4(1700): 445MHz LTE B13(700c): 41MHz				
Impedance	50 ohm				
Input Power	>24dB				

#### 5.2 Recommended Antennas

Туре	Manufacturer	Part Number
Primary Cellular	Taoglas <sup>1</sup>	TG.30.8113

**Note 1**: U.FL to SMA adapter required.

For applications not using the recommended antennas developers will need to ensure that the selected antenna(s) must meet the following gain requirements:

Frequency	Max Gain (dBi)
700 MHz Band	TBD
1700 MHz Band	TBD

# 6. Certifications

## **6.1** Carrier Specific

NL-SW-LTE-SVZM

Verizon OD Certified

## 6.2 Geography Specific

Federal Communications Commission (FCC47) part 22, 24 Complies with FCC47 Part 15 Class B Radiated and Conducted Emissions

# 7. Federal Regulatory Licensing

## 7.1 Export Control Classification Number (ECCN)

ECCNs are five character alpha-numeric designations used on the Commerce Control List (CCL) to identify dual-use items for export control purposes. An ECCN categorizes items based on the nature of the product, i.e. type of commodity, software, or technology and its respective technical parameters.

NL-SW-LTE-SVZM (and all Skywire Modems): 5A992.c

### 7.2 Harmonized Tariff Schedule Code

HTS Code: 8517.62.0010

# 8. End Product Labeling Requirements

Device Uses Approved Radio: NL-SW-LTE-SVZM

Contains FCC ID:TBD and IC ID: TBD

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interferences, and (2) this device must accept any interference received, including interference that may cause undesired operation.